



Toyota  
Camry Guide

Installation Guide: Thank you for purchasing ExtendMySeat (EMS) brackets.  
Please follow the directions carefully.

Inventory in Box:

- 2 - ExtendMySeat brackets
- 4 - Black 3/8" stainless bolts

What you will need for assembly:

- 1- Socket wrench
- 1- 9/16 & 14mm socket

Step 1- Remove the 2 Black ExtendMySeat brackets from the packaging.

Step 2- Go to your vehicle with a socket wrench and the sockets, eye protection and your keys. Remember to turn off your cabin lights.


Step 3- Go to the front seat and remove the 2 front seat plastic caps (it helps to remove by pulling clockwise). Take your socket wrench and loosen the 2 front factory bolts. Now slide your seat all the way to the front and go to the rear seat. Remove the 2 plastic guards to locate the 2-rear factory bolts. Now remove the rear bolts. The factory seat is now unsecure.



Front 2 brackets are identical



Step 4- Move back to the front seat. Start with the front 2 brackets. Grab the 2 ExtendMySeat brackets, tip your seat back and slide the brackets under the seat. Now rest the seat onto the EMS rear position. Do not screw any of the bolts yet.

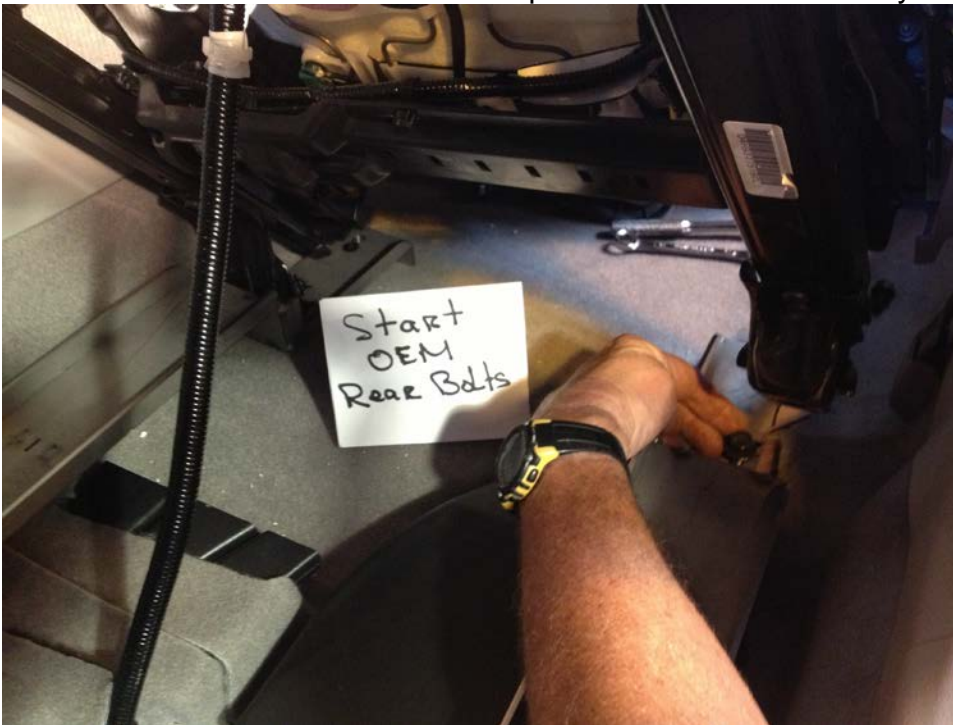

Step 5- Start with the rear factory bolts



Step 6- In the front area; lay your factory seat on top of the EMS brackets and line up seat front holes with EMS front holes. Finger tighten front 2 feet with provided black EMS bolts.



Step 10- Press seat lever and slide seat to the most up front position. Go to back seat and screw down secure the remaining 4 rear bolts.



Step 11- Make sure all 8 bolts are tight.

Step 12- Test the seat by sliding the seat back and forth.



Step 13- Enjoy!